



## BMW E30/E36/E36M/E46/E46M Stud conversion

1. Clean the threads in the knuckle add-on
2. Add thread locker to the top part of the stud

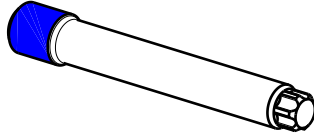

3. Thread the stud into the knuckle add-on. Make sure the stud is flush with the top side of the knuckle add-on.

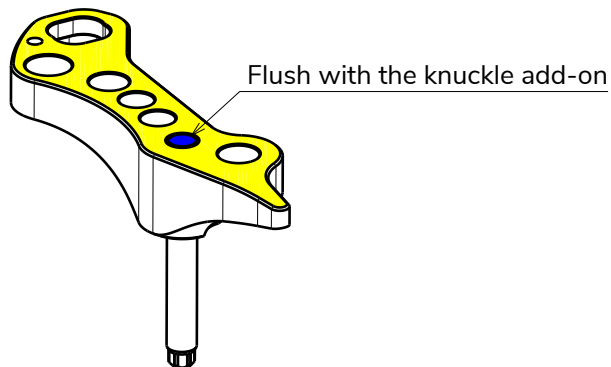

4. Replace the lower control arm spacers with new ones. Never use old spacers with 14mm inner diameter with the stud.
5. Install the lower control arm on to the stud. Thread the locknut on the stud finger tight. Hold the stud with E12 and fully tighten the locknut. Use the torque wrench and torque the nut to 100 Nm. No need to hold the stud with E12 when giving the final torque.

**FOR RACING  
USE ONLY**



If you still have some trouble installing the kit, contact us at [sales@wisefab.com](mailto:sales@wisefab.com), or call us **+372 5562 5669**