


## Toyota Supra front installation guide


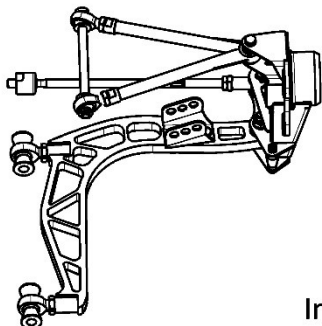


### Overall view of assembled components in the right corner

All lengths ( exc. tie rod ) are pre set by Wisefab. No need to adjust before alignment.

### Installing the upper A arms

Upper arms are symmetrical.

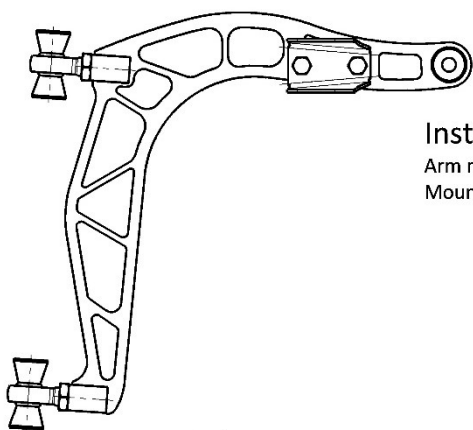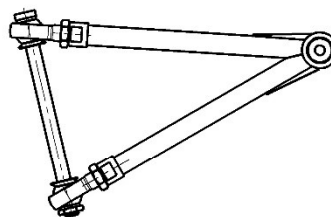


### Installing the lower arms.

Arm must be installed to the lower position.  
Mount arms with stock bolts, we recommend using new ones.

### Adjusting suspension stiffness

You can adjust motion ratio ride/roll stiffness by changing the coilover mounting point on arm.  
Moving it outwards, ride/roll will be stiffer.  
Moving it inwards, ride/roll will be softer.

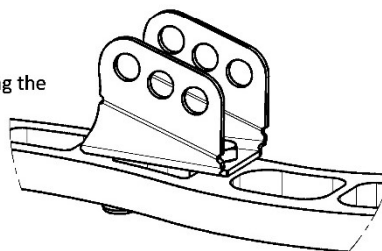

### Recommended alignment specs

Camber: -4,2 +/- 0,3

Caster: 5.1 +/- 0,3

Toe: If ackerman is 0 or negative then toe is 2 mm out.  
If ackerman is positive then toe is 0



If you still have some trouble installing the kit, contact us at  
**sales@wisefab.com**, or call us +372 5562 5669