


Mitsubishi EVO front installation guide

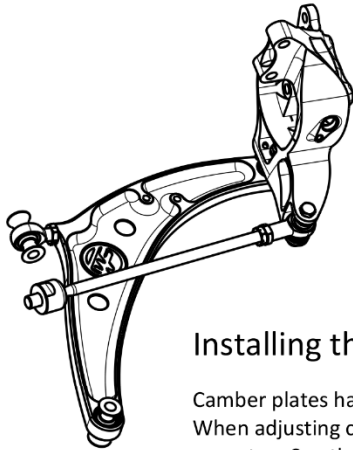


Overall view of assembled components in the right corner

All lengths are pre set by Wisefab.
No need to adjust before alignment.




Installing the camber plate


Camber plates have a built in camber and caster adjustment. When adjusting camber toelink correction is needed to keep the same toe. See the chart below with specs. 1flat equals 1/6 toelink turn.

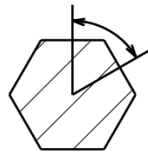

1flat = 1/6 turn

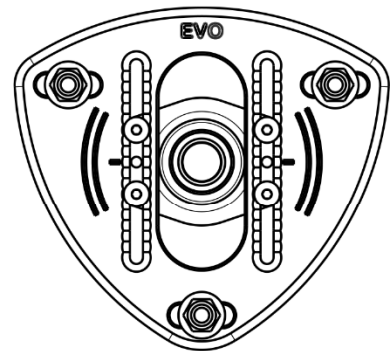

	Influence		Toelink adjustment		Toelink sensitivity
	Camber changes	Caster changes	Toelink adjustment per side to keep the same toe	Direction	
Camber adjustment 5mm step	0,44°	0	2,5flats	More neg camber = shorter toelink	9,3flats = 1° of toe change 1flat = 0,11° of toe change
Camber adjustment 3,75mm step	0,33°	0	1,9flats		
Caster adjustment 10mm	0	0,9°	0,6flats	More caster = shorter toelink	

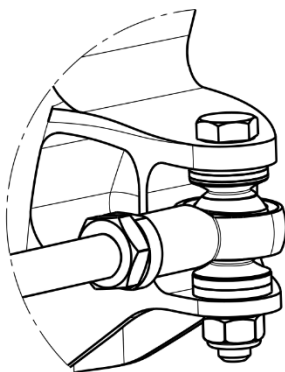

Installing the tierods

When installing tierods there are some washers included. These washers are for adjusting bumpsteer. If bumpsteer is not measured leave the tierod at the middle.



If you still have some trouble installing the kit, contact us at sales@wisefab.com, or call us +372 5562 5669