




WWW.WISEFAB.COM

## EVO

	Adjust	Change	Toelink correction needed	Toelink sensitivity
Front camber	5mm step	0,44°	1,9 flats	1 flat = 0,11° 9,3 flats = 1°
Caster	10mm	0,9° caster	0,6 flats	
Rear camber	1 turn	0,3°	1,2 flats	1 flat = 0,14° 7 flats = 1°

More negative camber = shorter toelink  
More caster = shorter toelink

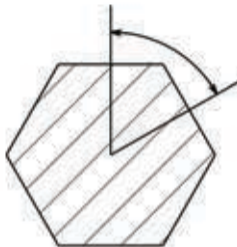

1flat = 1/6 turn